LAVATHERM 57520 electronic

Condenser Dryer

Operating Instructions

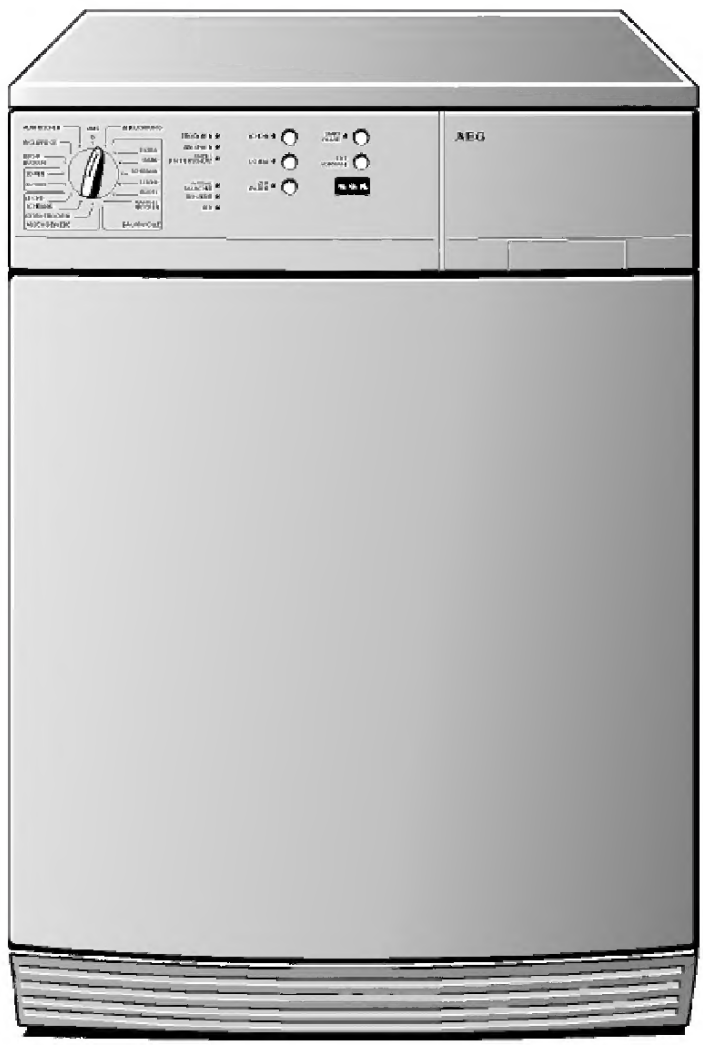

Downloaded from www.Manualslib.com manuals search engine

© 2016. All Rights Reserved.
Acer ProDock Wireless User Manual

This revision: March 2016

Downloaded from www.Manualslib.com manuals search engine

A Letter from the President of ADS Technologies
"Connect, Create, and Store"

At ADS Technologies, Inc. we bring the best and latest multimedia technology to your PC. Our products allow you to "Connect, Create and Store".

CONNECT with our line of USB and 1394 Host and Hub devices. Today, external bus technologies such as USB and FireWire/1394 let you connect hundreds of devices to your PC or MAC. We have the connectivity solutions that allow you to get the most out of USB and 1394 technologies.

CREATE audio and video productions with our line of video capture and editing solutions. We have video editing solutions to fit everyone's needs, ranging from the novice level to the professional level.

STORE that multimedia masterpiece with one of our 1394 storage solutions. Today's multimedia files are getting larger and larger. You need solutions that help you easily and cost effectively store your work; we've got those solutions.

More than ever, my goal has been to bring new technologies to the consumer market at affordable prices and with significant value to you, our customer.

ADS products are easy to use. Most of our products are Plug-and-Play, easy to install and offer software to help get the best value out of the hardware product. And if you do need help, we will do our best to support you. We want every customer to be a happy ADS customer.

The combination of technology innovation, affordability, quality, value and support has made our products award-winners in the press and at conventions. More over they are winners with our customers.

I wish to thank you for choosing ADS Technologies and I hope you enjoy your new multimedia experience.

Sincerely,

Michael McCoy
President

Downloaded from www.Manualslib.com manuals search engine

INSTALLATION AN SERVICING INSTRUCTIONS THE FOLLOWING SECTION LISTS THE INSTALLATION REGULATIONS AND REQUIREMENTS

All gas appliances must be installed by a competent person in accordance with the current Gas Safety (Installation and Use) Regulations 1994 (as amended) or the rules in force and in accordance with the manufacturers instructions, failure to do so could lead to prosecution
The following are the relevant Codes of Practice and British Standards.

BS 8303 1986	BS 5440 Pt1 1990 & Pt2 1989	The Building Regulations issued by the
BS1251 1987	BS 5871 Pt2 1991 & Pt3 1991	Department of the Environment. The
BS 6891 1988	BS 6461 Pt1 1984	Building Standards Scotland)(Consolidation)
BS 715 1989	BS 1289 Pt1 1986	Regulations issued by the Scottish Development
BS 7566 Pts 1-4 1992		Department.

TECHNICAL DATA

Overall height of fire	= 614 mm
Minimum height of opening required	= 550 mm
Maximum height of opening	= 590 mm
Minimum width of opening required	= 395 mm
Maximum width of opening with spacer	= 470 mm
Forward projection from opening (With controls cover)	= 140 mm
Min depth of openings	See Figs 1-8
TYPE OF GAS G20 Only	Supply Pressure 20 mbar +/- 1mbar (Cold)
GAS INPUTS (Gross)	
	Maximum 5.42 kW (18500 Btu/h)
	Minimum 2.34 kW (8000 Btu/h)
	Pilot 0.26 kW (890 Btu/h)
Main Injector Type	Bray Cat 82/380
	Or Stereomatic 046/19/196/68M
Pilot Assembly	SIT Oxy/Pilot NG 9022
GAS CONNECTION	8 mm O/D Tube
WEIGHT	22 kg

Note: None of the materials used in the manufacture of this appliance contain asbestos.

INSTALLATION NOTES

Care should be taken to ensure when the appliance is installed into a Pre-cast flue, the chimney breast is lined to prevent the plaster etc, cracking through excessive temperatures.

A certain amount of discolouration (blueing) may be seen on the stainless steel combustion chamber, this is normal due to the temperatures produced in the fire bed.

A hearth must always be provided, a minimum of 340mm and a minimum of 150mm either side of the fire opening with a minimum thickness of 12mm and a perimeter height of 50mm. This is to deter combustible materials, carpets etc, being placed on the hearth.

The area under the firebox must have a minimum non-combustible thickness of 25mm.

Downloaded from www.Manualslib.com manuals search engine

BEFORE CALLING SERVICE

Below is a list of frequently occurred symptoms. Before you call for service, make these simple checks. Some of these symptoms can easily be rectified if you know what to do.

Symptoms	What you should do
Colour patch (uneveness)	• Switch off the TV by the mains power button. Wait for 20 minutes before switching on again. • Check the TV is not placed too near speakers or magnetic objects.
No power	• Check the TV's AC power cord is plugged into the mains socket. If there is still no power, disconnect plug. Wait for 60 seconds and re-insert plug. Switch on the TV again.
No picture	• Check the antenna connection at the rear of the TV. • Possible TV station problem. Try another channel.
Good picture but no sound	• Try increasing the volume. • Check that the sound is not muted. If it is muted, press the **Mute** button on the remote control to restore sound.
Good sound but poor colour or no picture	• Try increasing the contrast and brightness setting.
Snowy picture and noise	• Check antenna connection at the rear of the TV.
Horizontal dotted lines	• Possible electrical interference e.g. hairdryer, vacuum cleaner, etc. Switch off appliances.
Double images or "Ghost" images	• Possible poor positioning of antenna. Using a highly directional antenna may improve reception.
TV not responding to remote control	• Aim remote control directly at remote sensor lens on the front panel of the TV. Check life span of batteries of the remote control.

Downloaded from www.Manualslib.com manuals search engine

Quick Installation Guide

1. Unpack the AcerHub ALH-616ds dual-speed Hub and it'saccessories (refer section 1.3).
2. Connect the Hub to the external Power supply (refer to section 2.4.1)
3. Use the normal ports to connect to PCs and computers.
4. Use the uplink port to connect to another hub or LAN switch.

Introduction

Thank you for purchasing this television set.
This handbook has been designed to help you install and operate your TV set.
We would strongly recommend that you read it thoroughly.

Table of Contents

Installation

Presentation of the LCD Television 2
Remote control 2
Remote control keys 3-4
Installing your television set 5
Quick installation 5
Program sort 6
Manual store 6
Other settings in the Install menu 6

Operation

Picture settings 7
Sound adjustments 7
Feature settings 7
Screen Formats 8
Teletext 9
Using the radio 10
Using in PC monitor mode 10
Using in HD (High Definition) Mode 11

Peripherals

Video recorder 12
Other equipment 13
Side connections 13
HD equipment 13
Computer 13

Practical information

Tips 14
Glossary 14

Recycling

The packaging of this product is intended to be recycled. Apply to the local authorities for correct disposal.

Disposal of your old product.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal households waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Downloaded from www.Manualslib.com manuals search engine

Erasing Selected Image----------58
SET-UP MODE----------59
Basic Setting----------59
Card Information----------59
File Number----------60
Format----------60
Sound----------61
Beep----------61
Auto Off----------62
Custom Setting----------63
Date/Time----------63
System Reset----------63
Language----------64
Video Output----------64
System Information----------65

TRANSFERRING RECORDED IMAGES/MOVIES TO YOUR COMPUTER----------66
Step 1: Installing the USB Driver----------67
Step 2: Connecting the Camera to Your Computer----------67
Step 3: Downloading Images/Movies----------67

INSTALLING NTI PHOTO SUITE----------69
CONNECTING THE CAMERA TO OTHER DEVICES----------70
CAMERA SPECIFICATIONS----------71

Downloaded from www.Manualslib.com manuals search engine

■ MY-CU with 3 PanTilt cameras (w/ MYW-P3CB)

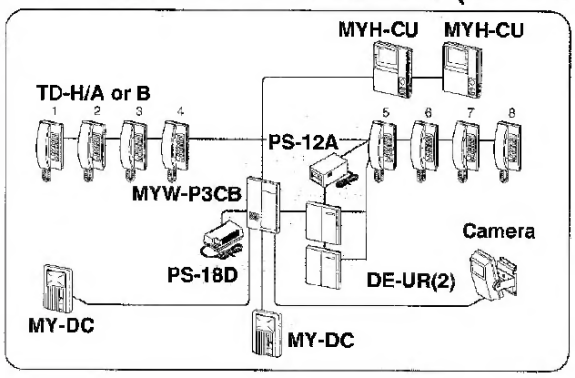

This is an expanded MY-CU system that includes max. 3 PanTilt cameras. Intercom can be either IE Series or TD-H/A or B.

★ Locate MYW-P3CB and power supplies in the middle point of using intercom system.

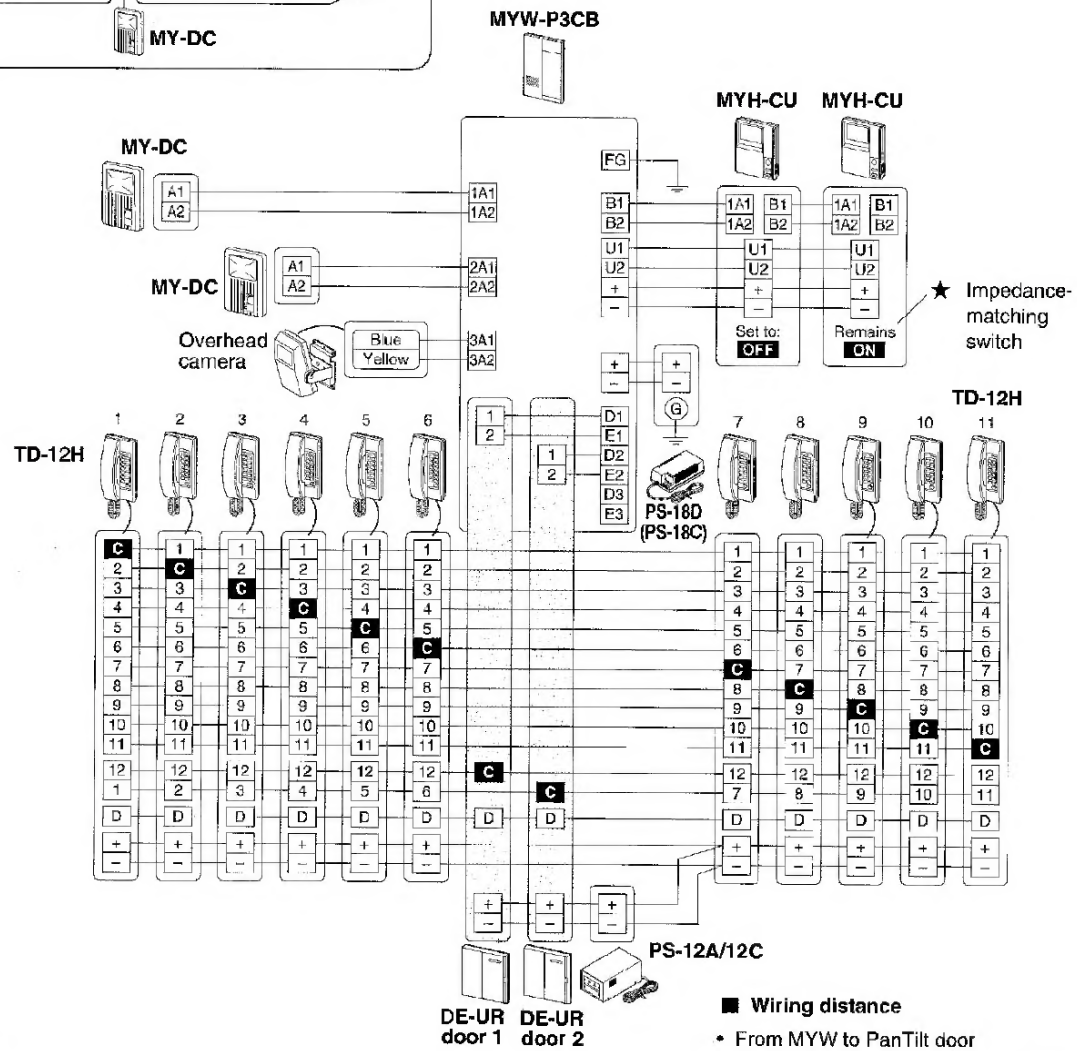

■ Wiring

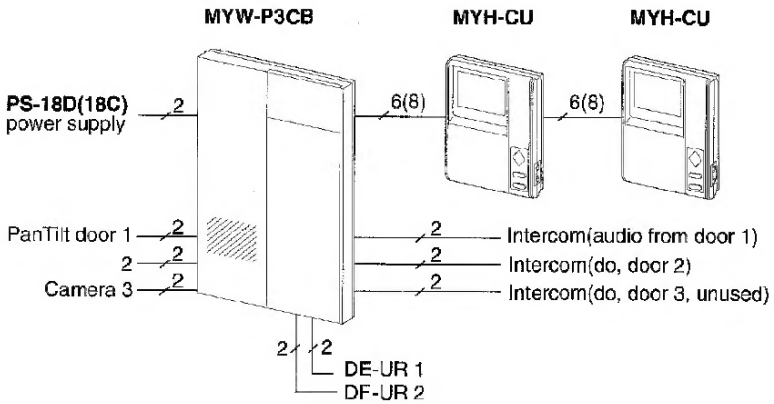

■ Wiring distance

- From MYW to PanTilt door

Diameter	0.65mm	0.8mm	1.0mm
Distance	50m	70m	100m
AWG	22AWG	20AWG	18AWG
Distance	165'	230'	330'

- From MYW to farthest MYH-CU monitor (1 or 2-monitor)

Diameter	0.65mm	0.8mm	1.0mm
Distance	35m	50m	75m
AWG	22AWG	20AWG	18AWG
Distance	115'	150'	250'

★ For 2-monitor system only, double wires on +, – terminals between MYW-P3CB and MYH-CU's.

- From MYW to PS-18D(18C)

Diameter	1.0mm	AWG	18AWG
Distance	5m	Distance	16'

Downloaded from www.Manualslib.com manuals search engine

4. Select **Network & internet**.

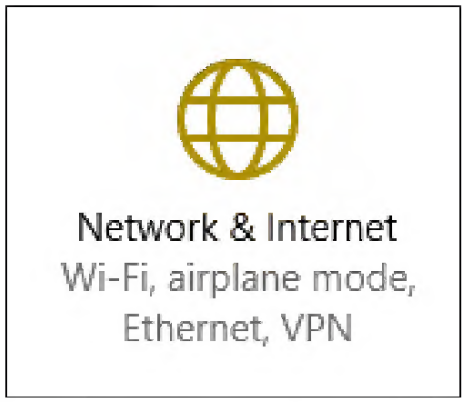

5. You will see a list of available wireless networks. Select the one you wish to use.

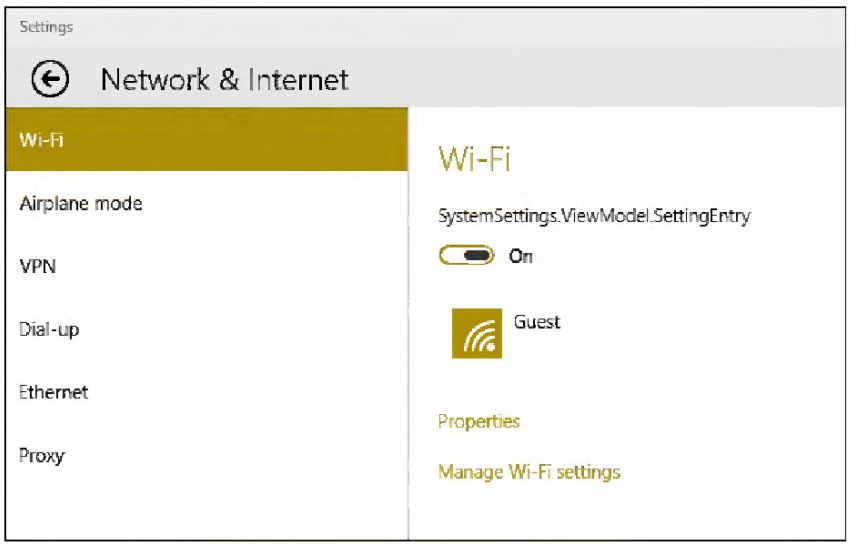

Downloaded from www.Manualslib.com manuals search engine

Adjust the water softener

To avoid the scale deposits on the dishes and in the dishwasher, the dishes must be washed with soft, i.e. low lime content, water. The dishwasher therefore has a built-in water softener, in which tap water from a hardness of 4 °d (German degree) is softened with the aid of special salt.

You water supplier will be able to inform you on the hardness and hardness range of the water in your area.

☞ Adjust the water softener to the setting that corresponds to the hardness of the water in your area. The water softener can be adjusted in 10 steps.

Water Hardness in °d[1])	in mmol/l [2])	Range	Adjust to Hardness Setting	Number of Flashes
41-50	7.3-9.0	IV	9	9
35-40	6.3-7.2		8	8
31-34	5.5-6.2		7	7
27-30	4.8-5.4		6	6
23-26	4.1-4.7		5	5
19-22	3.3-4.0	III	4	4
15-18	2.6-3.2		3*	3
11-14	1.9-2.5	II	2	2
4-10	0.7-1.8	I/II	1	1
under 4	under 0.7	I	0 no salt necessary	10

1)(°d) German degree, measure of the hardness of water
2)(mmol/l) millimol per litre, international unit for the hardness of water
*factory setting

☞ **1.** The dishwasher must be switched off.

2. Press the function and water softener buttons simultaneously and keep them pressed

3. In addition press the ON/OFF switch ⏻.
The LED indicators for the function and water softener buttons flash.

4. Press the softener button again.
The water softener button indicator starts to flash.
- The number of flashes corresponds to the hardness setting. (Exception: hardness setting 0 is indicated by 10 flashes).
- The sequence of flashes is repeated after a 5 second pause.

Downloaded from www.Manualslib.com manuals search engine

4. To maintain the hotplates, rub in a little sewing machine oil now and again and then polish off with absorbent paper.

For stainless steel edges of the hob use cleaner for stainless steel.

The stainless steel edge of the plate can be slightly discoloured as a result of the thermal load.

OVEN - DAILY USE

WARNING!
Refer to "Safety information" chapter.

Activating and deactivating the appliance

1. Turn the knob for the oven functions to an oven function.
2. Turn the knob for the temperature to a temperature.
   The power indicator comes on while the appliance operates.
   The temperature indicator comes on while the temperature in the appliance increases.
3. To deactivate the appliance, turn the knob for the oven functions and the knob for the temperature to the Off position.

Oven Functions

Oven function		Application
0	OFF position	The appliance is OFF.
	LIGHT	Use this function to light up the oven interior.
	FAN-ASSISTED CIRCULATION	To bake on a maximum of two oven levels at the same time. Set the oven temperatures (20-40°C) lower than for Conventional. To dry food.
	CONVENTIONAL	To bake and roast on one oven level.
	BASE HEAT	To bake cakes with crispy or crusty bases and to preserve food.
	DEFROST	To defrost frozen food.
	SINGLE GRILL	To grill flat food items in the middle of the grill and to toast.
	DUAL GRILL	To grill flat food items in large quantities and to toast.
	ROTITHERM	To roast larger joints of meat or poultry on one level. Also to gratinate.

Downloaded from www.Manualslib.com manuals search engine